

SUBJECT:





VRIS-3942-1X1

INSTALLATION INSTRUCTION SHEET

WARNING: ELECTRICAL SHOCK POTENTIAL !! DO NOT ATTEMPT TO INSTALL, MAINTAIN OR RELAMP WITHOUT DIS-CONNECTING ALL POWER, FAILURE TO DISCONNECT POWER CAN RESULT IN ELECTROCUTION, SHOCK OR SEVERE BURNS. ONLY QUALIFIED PERSONNEL TO CONDUCT INSTALLATION.

CAUTION: INSTALL IN COMPLIANCE TO ALL APPLICABLE ELECTRICAL AND BUILDING CODES. INSTALLATION MUST BE PERFORMED BY QUALIFIED PERSONNEL.
***** SHOCK HAZARD. DISCONNECT ALL POWER BEFORE PERFORMING INSTALLATION *****

1. Disconnect mains power.
2. Open the fixture door frame by removing the three (3) 10-24 screw using a T-25 Torx bit with security pin clearance. The door frame is hinged and will swing open.
3. Remove the 4 wing-Nuts to remove the LED Plate. The plate can be disconnected with a 3-wire disconnect. The LED Plate doubles as the driver cover.
4. Secure the fixture to ceiling surface at its intended location with appropriate hardware (supplied by others). Four (4) fixture mounting points are provided.
5. Ceiling and mounting hardware must be capable of supporting the full weight of the fixture and meet local building codes. Additionally, use hardware as specified by the architect to withstand required force in vandal resistant applications. Note, the estimated fixture weight is 9.kg (20 lbs).
6. Make wiring connections. Ensure the fixture is properly grounded to the fixture ground stud. A 7/8" Access hole is provide on fixture.
7. Re-connect the disconnect and re-attached the LED Plate / Cover using the same wing-nuts.
8. Re-secure the door frame with the 10-24 flathead Torx screws (3x).

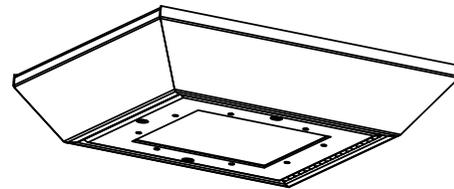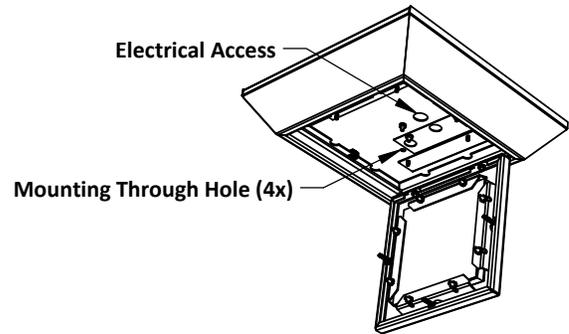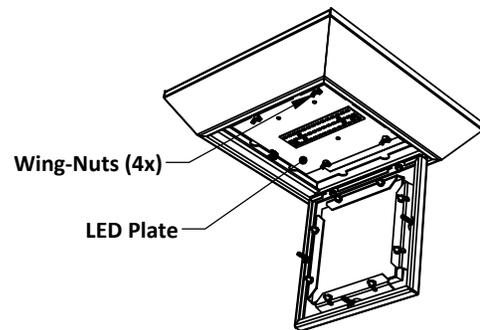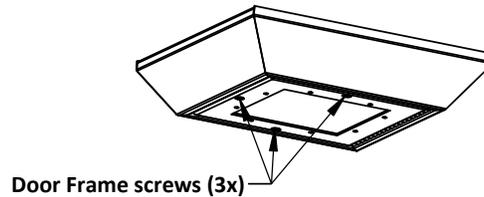

January 2016

VRIS-3842-1X1



Drg No: IIS00164