



BOTTOM VIEW WITH REMOVED COMPONENTS PER STEPS 1 & 2.

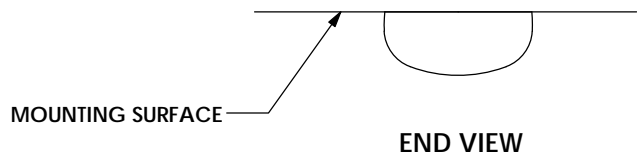

**INSTRUCTIONS:**

1. TO REMOVE LENS, FIRST REMOVE 4x LENS SCREWS (IT MAY BE A TORX T-15 OR T-25 DRIVE WITH SECURITY PIN).
2. APPLY PRESSUE TO PUSH LENS INTO ONE END. PULL LENS AWAY FROM HOUSING AT OPPOSITE END.
3. REMOVE LAMPS. REMOVE TRAY RETAINING SCREWS (PHILIPS #2 DRIVE) IN 6 PLACES FOR a 4 FOOT HOUSING. LET TRAY HANG. YOU NOW HAVE ACCESS TO MOUNTING HOLES.
4. MOUNT FIXTURE TO SURFACE AT SPECIFIED MOUNTING HOLES USING HARDWARE PROVIDED BY OTHERS.
5. THERE ARE 3  $\phi$ .875 KNOCK-OUTS PROVIDED FOR ELECTRICAL WIRE ACCESS. BUSHING PROVIDED BY OTHERS.
6. AFTER FIXTURE IS MOUNTED AND SECURE, RE-ASSEMBLE COMPONENTS IN REVERSE ORDER.

	NAME	DATE	 35 Oak St., Toronto, ON M9N 1A1 647-777-3300			
Drawn	rdoucet				ERP #:	IIS00029
Last Saved	rdoucet	6/5/2015	Title			
Checked			Part Name: IIS-VRSE3556-20120625.1			
<b>PROPRIETARY AND CONFIDENTIAL</b> THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF CERTOLUX - DIVISION OF VISIONEERING CORP. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF CERTOLUX IS PROHIBITED.			Description: 3556 VRSE 4 FOOTER INSTALLATION INSTRUCTION			
			MATERIAL:	FINISH: None		
UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES ANGULAR: BEND $\pm$ 1 ONE PLACE DECIMAL $\pm$ 0.030 TWO PLACE DECIMAL $\pm$ 0.015 THREE PLACE DECIMAL $\pm$ 0.005			SIZE: A	SCALE:	SHEET 1 of 1	