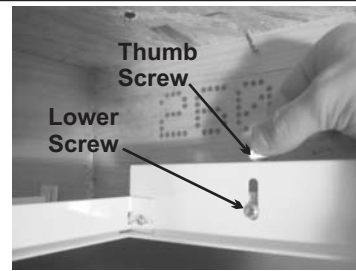
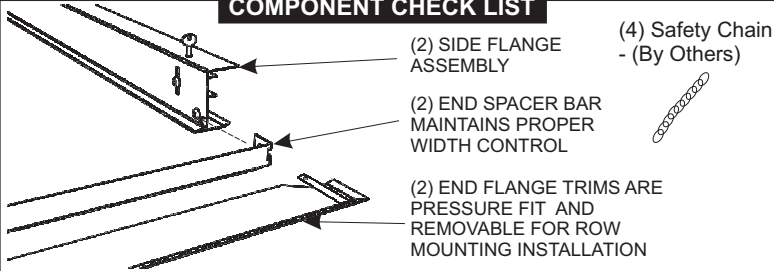



35 Oak Street Toronto, Ontario M9N 1A1
 Tel: (416) 245.7991 | Fax: (416) 245.4778

INSTALLATION PROCEDURE FOR MOUNTING FLANGE KIT


 THIS FLANGE KIT IS INTENDED FOR INSTALLATION IN A RECESSED CEILING CAVITY.
 IDENTIFY ALL PARTS AND READ THE FOLLOWING ASSEMBLY INSTRUCTIONS BEFORE PROCEEDING WITH THE INSTALLATION.
 TO PREVENT ELECTRICAL SHOCK, TURN OFF ELECTRICITY AT FUSE BOX BEFORE PROCEEDING.

COMPONENT CHECK LIST


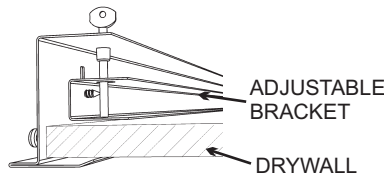
5. TIGHTEN LOWER SCREW TO ADJUSTABLE BRACKET TO MAKE FLANGE KIT FLUSH WITH CEILING SURFACE. NEXT, TIGHTEN THUMB SCREW TO SECURE INTO PLACE.

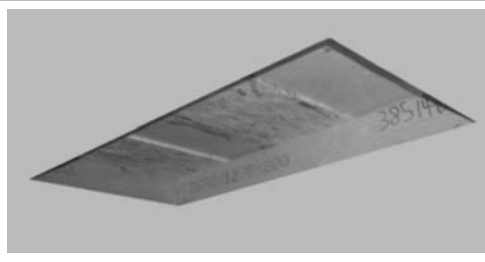
1. CUT OPENING

- 1'x2' - 12 3/4" x 24 1/2"
- 2'x2' - 24 3/4" x 24 1/2"
- 1'x4' - 12 3/4" x 48 1/2"
- 2'x4' - 24 3/4" x 48 1/2"

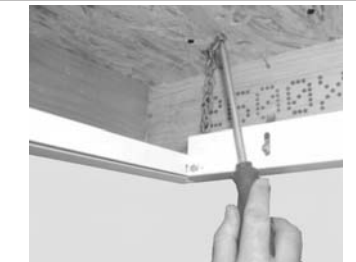

6. INSTALL SAFETY CHAIN (BY OTHERS) FROM HOLES PROVIDED ON THE TOP OF SIDE FLANGE ASSEMBLY TO THE CEILING STRUCTURE.


2. INSTALL SIDE FLANGE ASSEMBLY.


7. *WIRE AND LAY FIXTURE INTO PLACE BY INSERTING ON AN ANGLE. FOR CONVENIENCE, REMOVE DOOR FRAME TO FACILITATE EASIER HANDLING



3. GENTLY TIGHTEN THUMB SCREWS ENSURING ADJUSTABLE BRACKET IS PRESSED LIGHTLY AGAINST DRYWALL. MAKE SURE **NOT** TO TIGHTEN ALL THE WAY.



8. SLIDE IN END FLANGE TRIM (IF ROW MOUNTED THEN ONLY REQUIRED AT START AND END OF RUN).



4. INSTALL END SPACER BARS AND TIGHTEN SCREWS. MAKE SURE ALL FOUR CORNERS ARE SQUARED BEFORE TIGHTENING. NOTE: LINE-UP RECTANGULAR CUT-OUT SLOT TO THE HEAD OF THE SCREW AND SLIDE IN WHEN PLACING.



9. INSTALLATION COMPLETE.

Due to possible uneven ceiling surfaces, some light leaks may appear at the flange/ceiling junction. It may be necessary to manually bend the end flange trims to suit.

