



July 17, 2007/Rev-02

ERP# IIS0078


35 Oak Street Toronto, Ontario M9N 1A1

Tel: (416) 245.7991 | Fax: (416) 245.4778


E-mail: vision@viscor.com www.viscor.com

INSTALLATION INSTRUCTION
FHBP SERIES
Fluorescent High Bay P


INSTALLATION PROCEDURE FOR MOUNTING THE ACRYLIC LOWER LENS TO UPPER LENS.

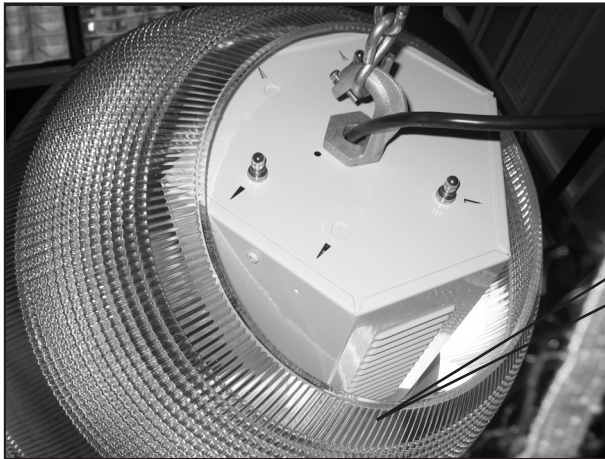

The lens is installed by dropping it down over the housing.

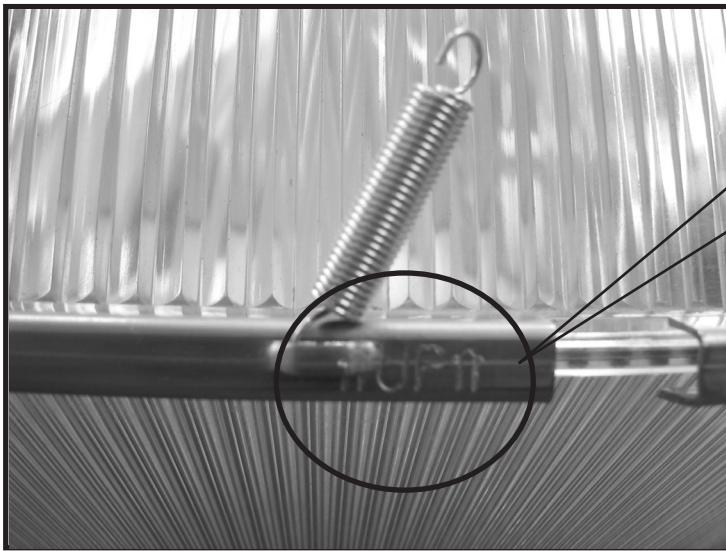

When installing the Lower lens to the Upper Lens ensure that the arrow direction of the clamp band is facing "UP".

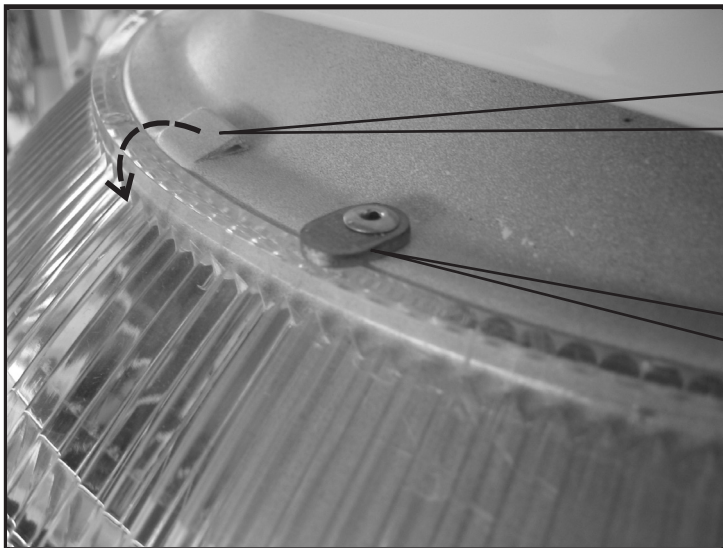

In Non-Static areas tabs should be bent over to lock upper lens in place to ensure extra security.

Also, use the 3 swing-out tabs to lock the upper lens.



July 17, 2007/Rev-02

ERP# IIS0078


35 Oak Street Toronto, Ontario M9N 1A1

Tel: (416) 245.7991 | Fax: (416) 245.4778


E-mail: vision@viscor.com www.viscor.com

INSTALLATION INSTRUCTION
FHBP SERIES
Fluorescent High Bay P


INSTALLATION PROCEDURE FOR MOUNTING THE *T-BOLT CLAMP BAND* TO THE POLYCARBONATE LOWER AND UPPER LENS.

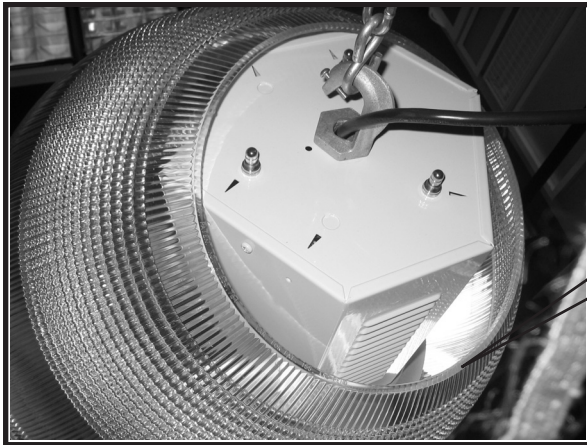

The lens is installed by dropping it down over the housing.

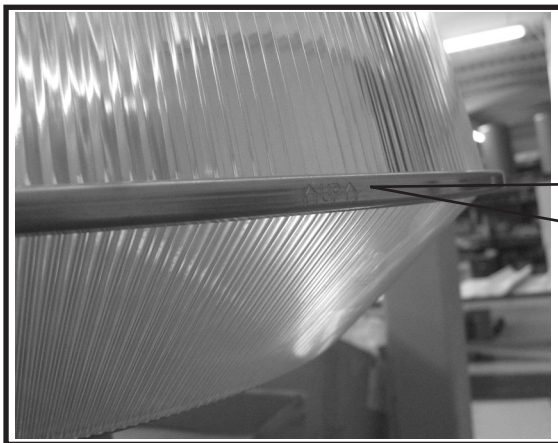

When installing the Lower lens to the Upper Lens ensure that the "UP ARROW" is facing up toward the ceiling.

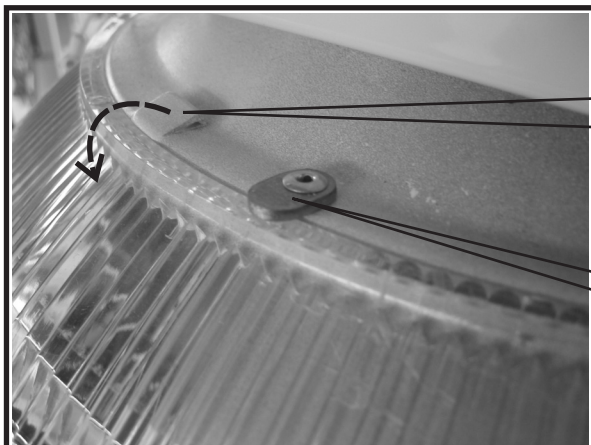

In Non-Static areas tabs should be bent over to lock upper lens in place to ensure extra security.

Also, use the 3 swing-out tabs to lock the upper lens.