


SUBJECT:

ALRB-row

INSTRUCTION SHEET

WARNING: ELECTRICAL SHOCK POTENTIAL !! DO NOT ATTEMPT TO INSTALL, MAINTAIN OR RELAMP WITHOUT DIS-CONNECTING ALL POWER, FAILURE TO DISCONNECT POWER CAN RESULT IN ELECTROCUTION, SHOCK OR SEVERE BURNS. ONLY QUALIFIED PERSONNEL TO CONDUCT ELECTRICAL INSTALLATION.

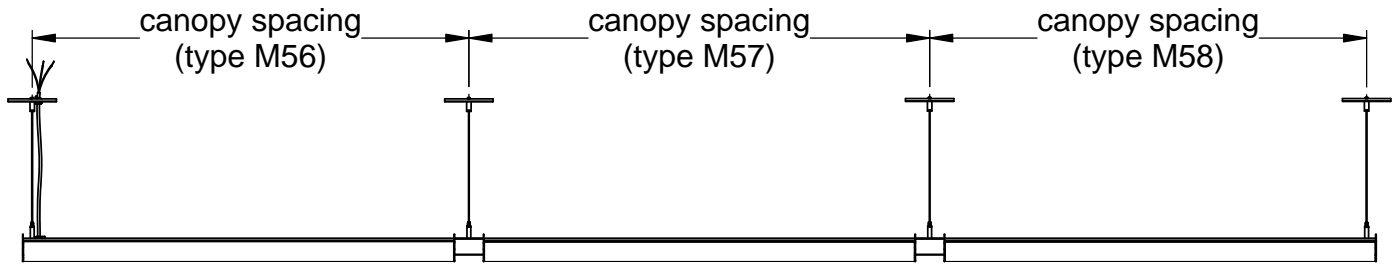

Nominal Fixture Length	4ft			8ft		
Fixture Type	M56	M57	M58	M56	M57	M58
Canopy Spacing	45.5"	48"	45.5"	89.5"	92"	89.5"

Step 1. Disconnect power.

Step 2. Install canopy sets (cross bar, threaded rod, canopy, cable coupler, AC cable, power cord) and connect power cord (see dwg 1). For spacing refer to table provided.

Step 3. Install cable grippers via 1/4-20 threaded rods (supplied) to the fixtures.

Step 4. Hang the beginning of the row fixture (type M56) inserting AC cables through cable grippers. Adjust suspension height as required and level the fixture.

Step 5. Remove fixture cover and connect power to the fixture utilizing strain relief (provided) and make wiring connections according to local electrical codes. Reinstall cover.

Step 6. Hang the next fixture (type M57) and attach the loose end to previously mounted fixture. Remove fixture cover. Tighten the 1/4-20 nuts (provided) until fixtures are firmly attached and connect power leads. Reinstall cover.

Step 7. Repeat steps until row is complete.

