

NOTES

- Installation should be completed by an individual familiar with the construction and operation of the luminaire.
- Installation of luminaire must be in accordance with national and local building and electrical codes.
- Carefully read and follow all warnings and instructions before installing or servicing the luminaire.
- Instructions do not cover all details and all possible product configurations
- Do not restrict luminaire ventilation.
- Ensure LED luminaire is not covered with material that will prevent convection or conduction cooling.
- Do not exceed luminaire's maximum ambient temperature.
- Ensure LED luminaire has the correct polarity before installation.
- These products have maximum rated output voltage that exceeds the voltage limits that cannot be accessible based on voltage restrictions for Class 2 circuits in Canadian Electrical Code. This output complies with the definition of Class 2 per Canadian Electrical Code. This product complies with this requirement

WARNINGS

Electric shock:

- Disconnect or turn off power before installing or servicing luminaire.
- All electrical wiring to be completed by a qualified licensed electrician in accordance with local and National/Canadian Electrical Code.
- Ensure supply voltage corresponds with the correct ballast/driver voltage.
- Avoid exposing wiring to metal edges and sharp objects.
- Ensure that the luminaire is properly grounded to prevent electric hazards.
- Before powering up fixture, perform appropriate testing to ensure the fixture is properly grounded.

Fire:

- Keep flammable and combustible materials away from the light source and/or lens.
- Use correctly rated supply conductors as indicated by product labeling.

Burn:

- Allow luminaire to cool before handling luminaire.

Personal Injury:


- Wear safety glasses and gloves when handling the luminaire to avoid physical injury.
- Avoid direct eye contact with light source.
- Always support the weight of the luminaire.

Intended Use:

- Certain airborne contaminants can diminish integrity of acrylic and/or polycarbonate.
- Certain airborne contaminants may also adversely affect the functioning of LEDs and other electronic components, depending on various factors such as concentrations of the containments, ventilation, and temperature at the end-user location.
- Failure due to the effect of contaminants is not covered under our standard terms of warranty.

Manufacturer is not responsible for any injuries due to the improper installation or handling of its products.

STAND ALONE (INDIVIDUAL) MOUNTING

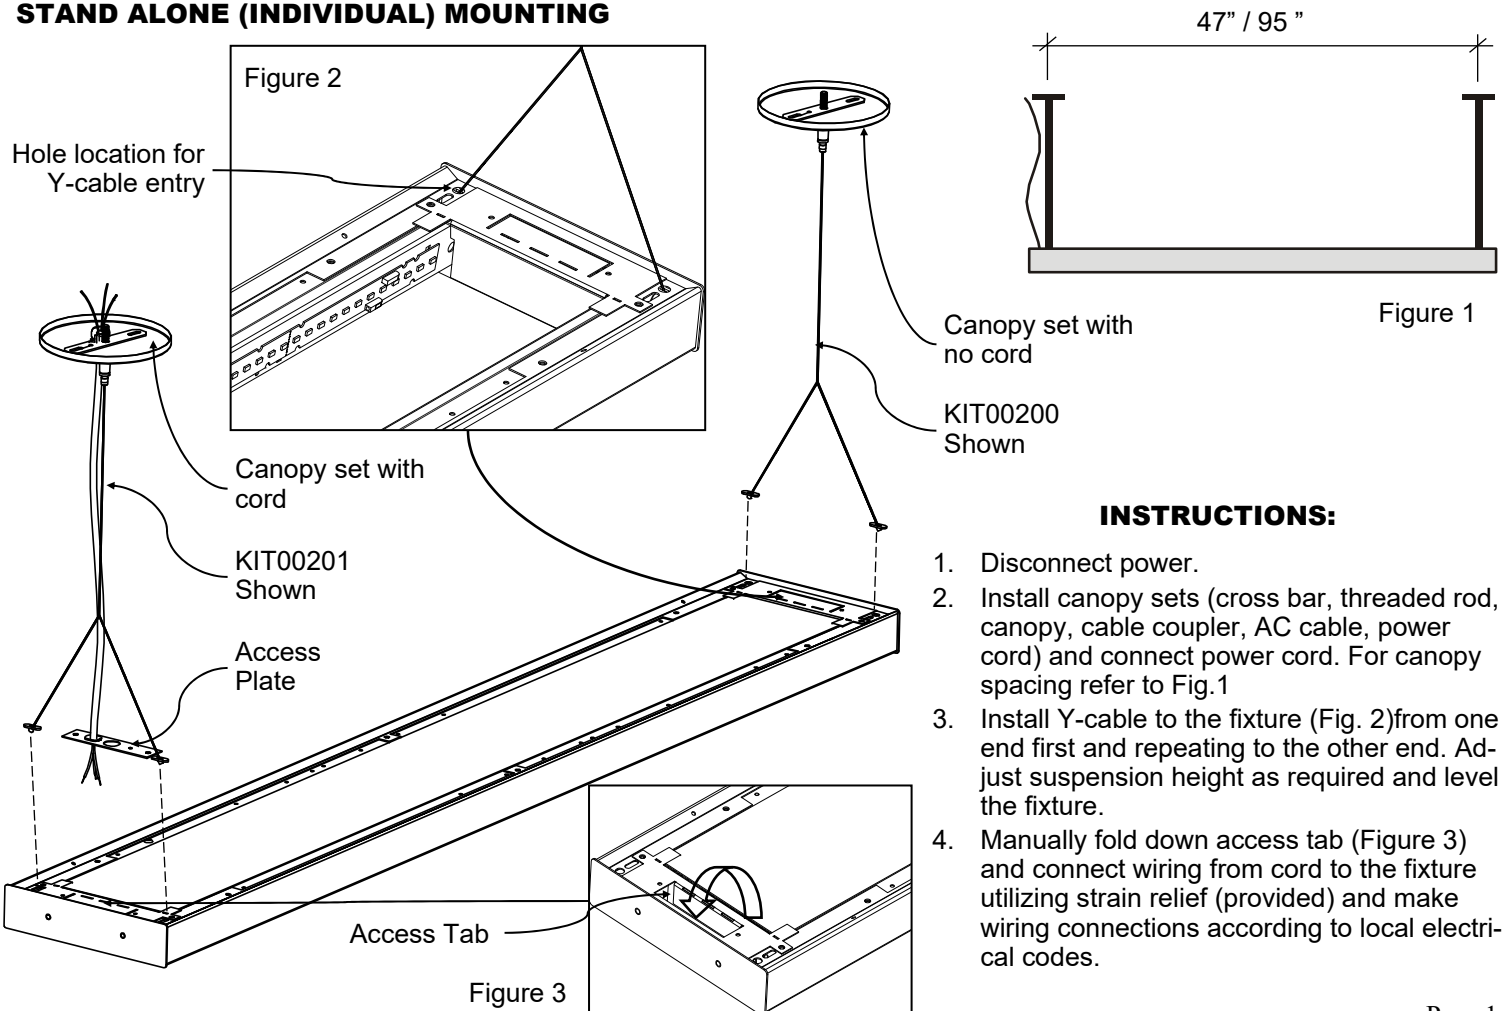

ROW MOUNTING

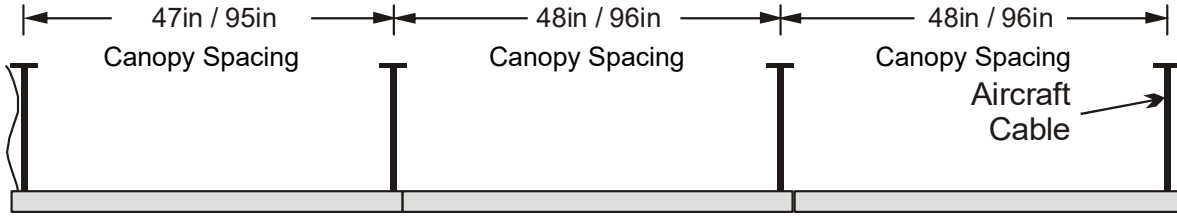


Figure 1


M56-Start Fixture
(c/w 2 aircraft cables,
1 power feed cord)

M57-Mid Fixture
(c/w 1 aircraft cable)

M58-End Fixture
(c/w 1 aircraft cable)

INSTRUCTIONS: (see page over)

1. Disconnect power.
2. Remove cover end plates, top lens.
3. Install canopy sets (cross bar, threaded rod, canopy, cable coupler, AC cable, power cord) and connect power cord (see Dwg 1).
For canopy spacing refer to Fig.1
4. Install Y-cable to the fixture (Fig. 2) from one end first and repeating to the other end. Adjust suspension height as required and level the fixture.
5. Bend down with hand the start of first fixture (M56) as shown on page 1 Figure 3. Connect wiring from cord to the fixture utilizing strain relief (provided) and make wiring connections according to local electrical codes.
6. Hang the beginning of the row fixture (type M56) inserting Y-cable through holes. Adjust suspension height as required and level the fixture.
7. Hang the next fixture (Type M57), Connect harness wiring by snapping in connectors. Open tabs and insert into slots as shown on page 3, Figure 3 for alignment. Use fasteners provided to positively join fixtures.
8. Repeat steps for M58 until row is complete.

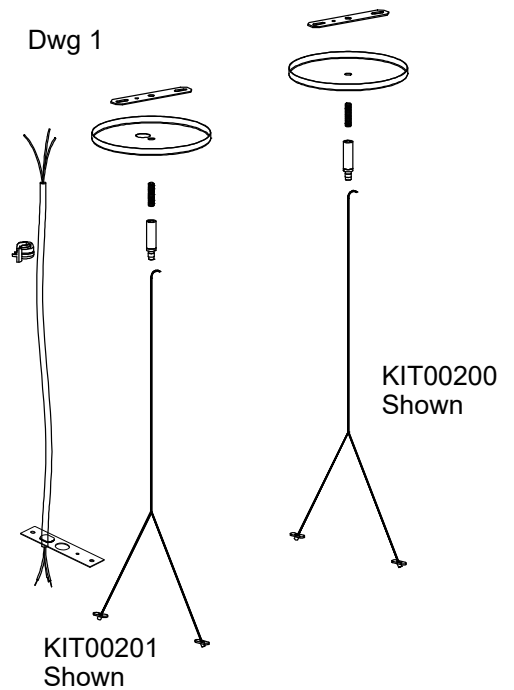

ROW MOUNTING



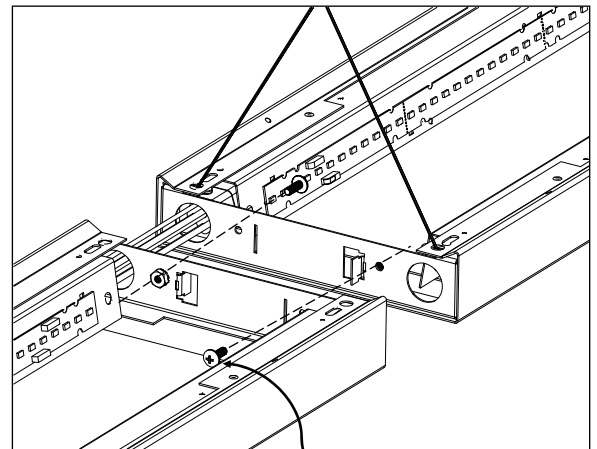









Figure 3

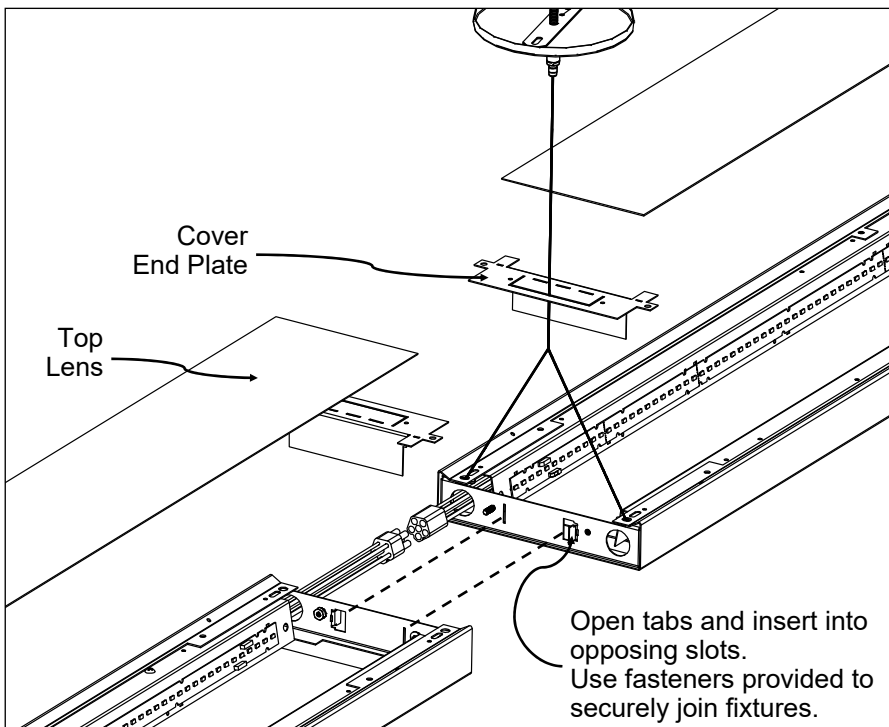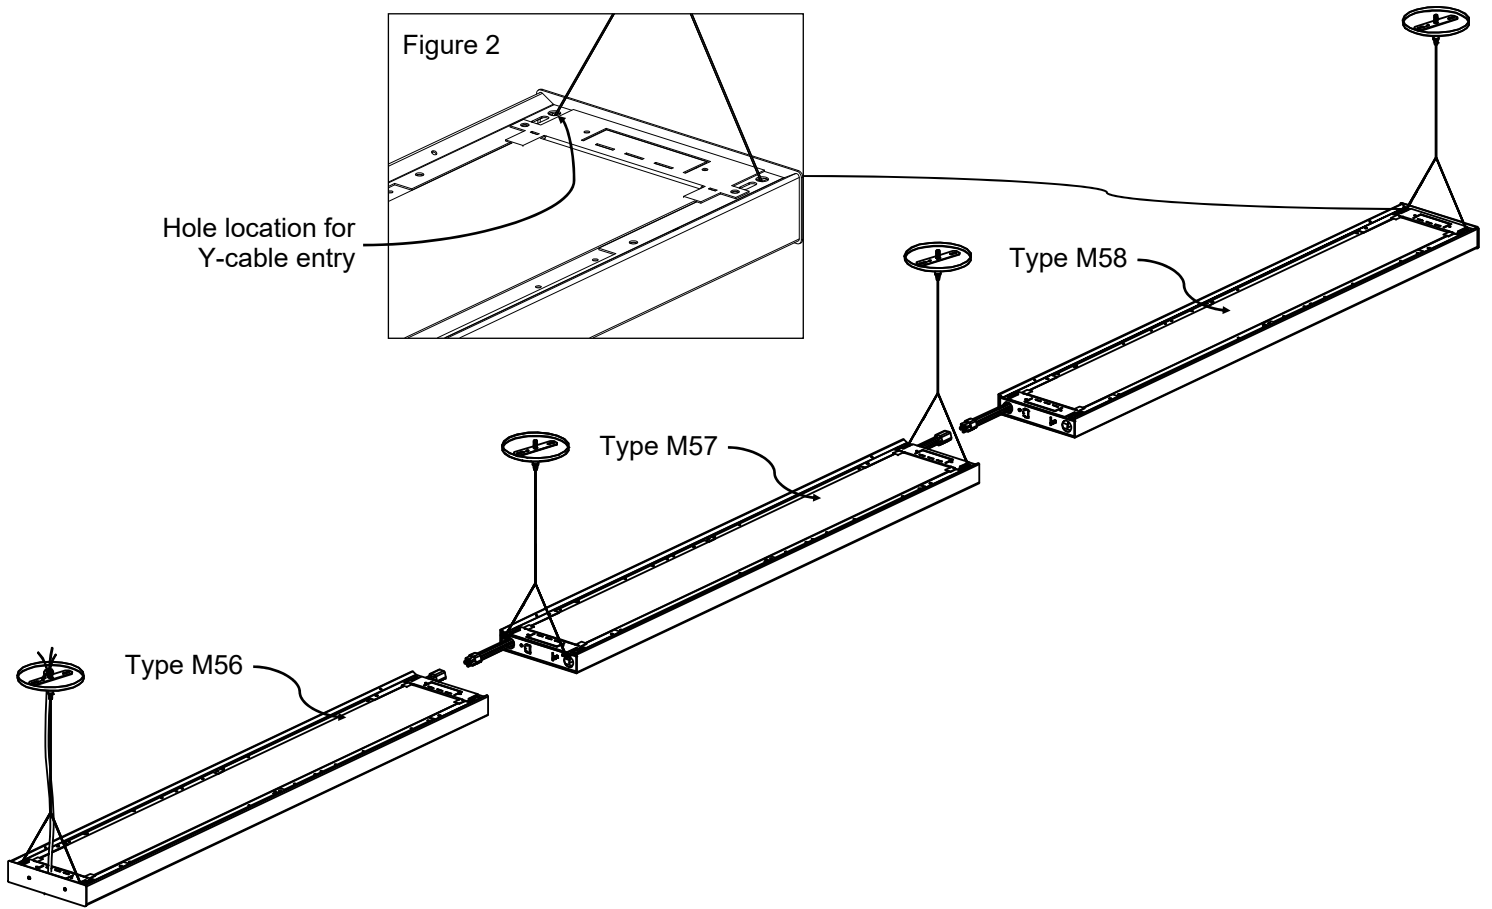



Step 1. Select desired **unit**.

Step 2. For configurable system,
Select desired **connector(s)**

Step 3. For configurable system,
Select suspension kit(s)** and power feed(s)

Part#	Description	
C91		Stand-alone
M56		Start Unit
M57		Middle Unit
M58		End Unit


Part#	Description	
For straight row mounting, no connector needed.		
KIT00485		Elbow Connector (90 Degrees)
KIT00486		T Connector
KIT00487		Cross Connector


Part#	Description	
KIT00200		60" Air Craft Cable & Canopy
KIT00201		5-Wire UNV Power Feed with 60" Air Craft Cable & Canopy
KIT00202		3-Wire 347V Power Feed with 60" Air Craft Cable & Canopy (NonDimmable)
KIT00203		5-Wire 347V Power Feed with 60" Air Craft Cable & Canopy

Configurations





Stand-alone with flat ends

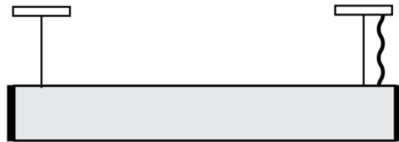
(power feed, canopies & air craft cables included)

Part#	Description	Qty.
C91		1







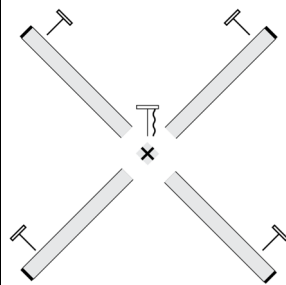
Tee with flat ends

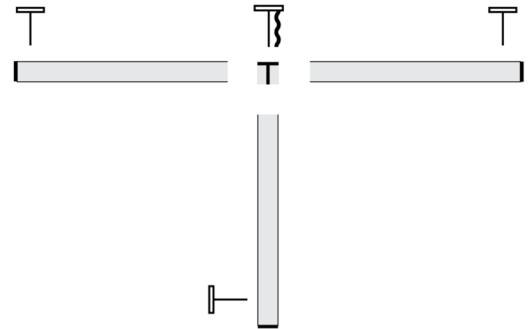Part#	Description	Qty.
M58 Unit		3
KIT00200		3
KIT00201		1
KIT00198		1







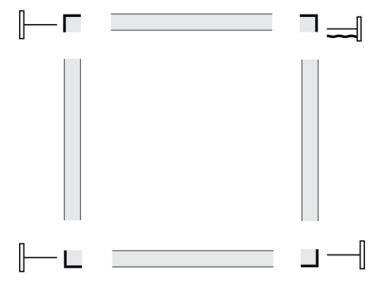
Cross with flat ends

Part#	Description	Qty.
M58 Unit		4
KIT00200		4
KIT00201		1
KIT00199		1


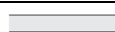





Cross with flat ends

Part#	Description	Qty.
M57 Unit		4
KIT00200		3
KIT00201		1
KIT00197		4



Row with flat ends

Part#	Description	Qty.
M56 Unit		1
M57 Unit		2
M58 Unit		1
KIT00200		4
KIT00201		1



Mounting Points

